


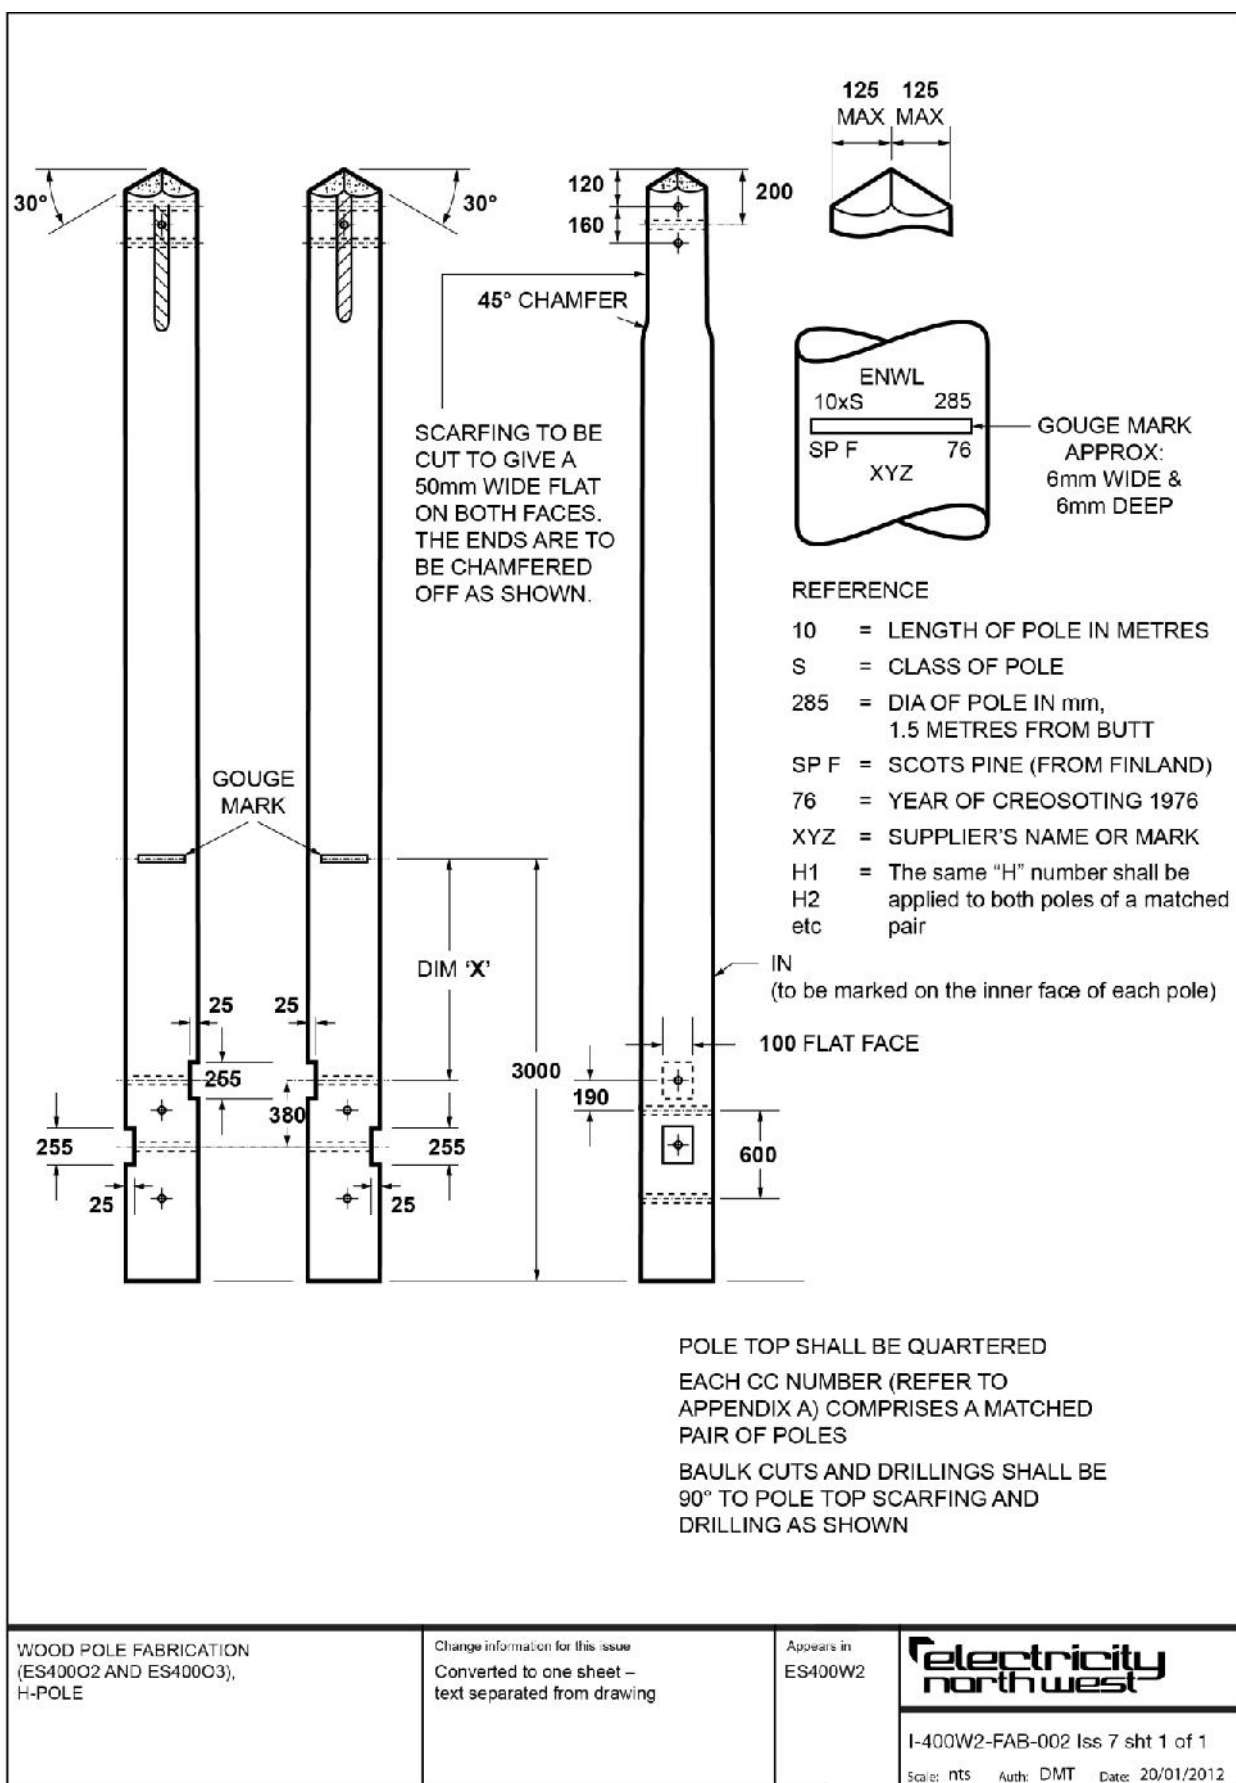

NOTES ON DRAWING I-400W2-FAB-002

1. Foundation blocks, brace blocks and H-pole foundation kits shall be selected and ordered separately. Refer to ES400O2 or ES400O3 as appropriate.
2. This fabrication is for use with H-pole structures.
3. Individual poles shall be matched to form the "H" structure.
4. The pole butt shall be cut at right angles to the vertical axis of the pole.
5. All cutting, drilling and scarfing shall be done using a template prior to preservation treatment.
6. All holes shall be 22mm diameter and drilled at right angles to the vertical centre line of the pole.
7. Pole size and grade shall be impressed on the butt of each pole.
8. Medium class poles shall have a minimum top diameter of 175mm.
9. Stout class poles shall have a minimum top diameter of 210mm.
10. Pole length/Dimension "X" and Planting Depth:

Pole Length (m)	Dimension 'X' (mm)	Planting Depth (mm)
9, 10, 11, 12	1700	1800
13, 14, 15, 16, 17, 18	1100	2400
20, 22, 24	500	3000

11. The pole top dimensions shown on the drawing (125 (max)) are from pole centre to scarfed face.