


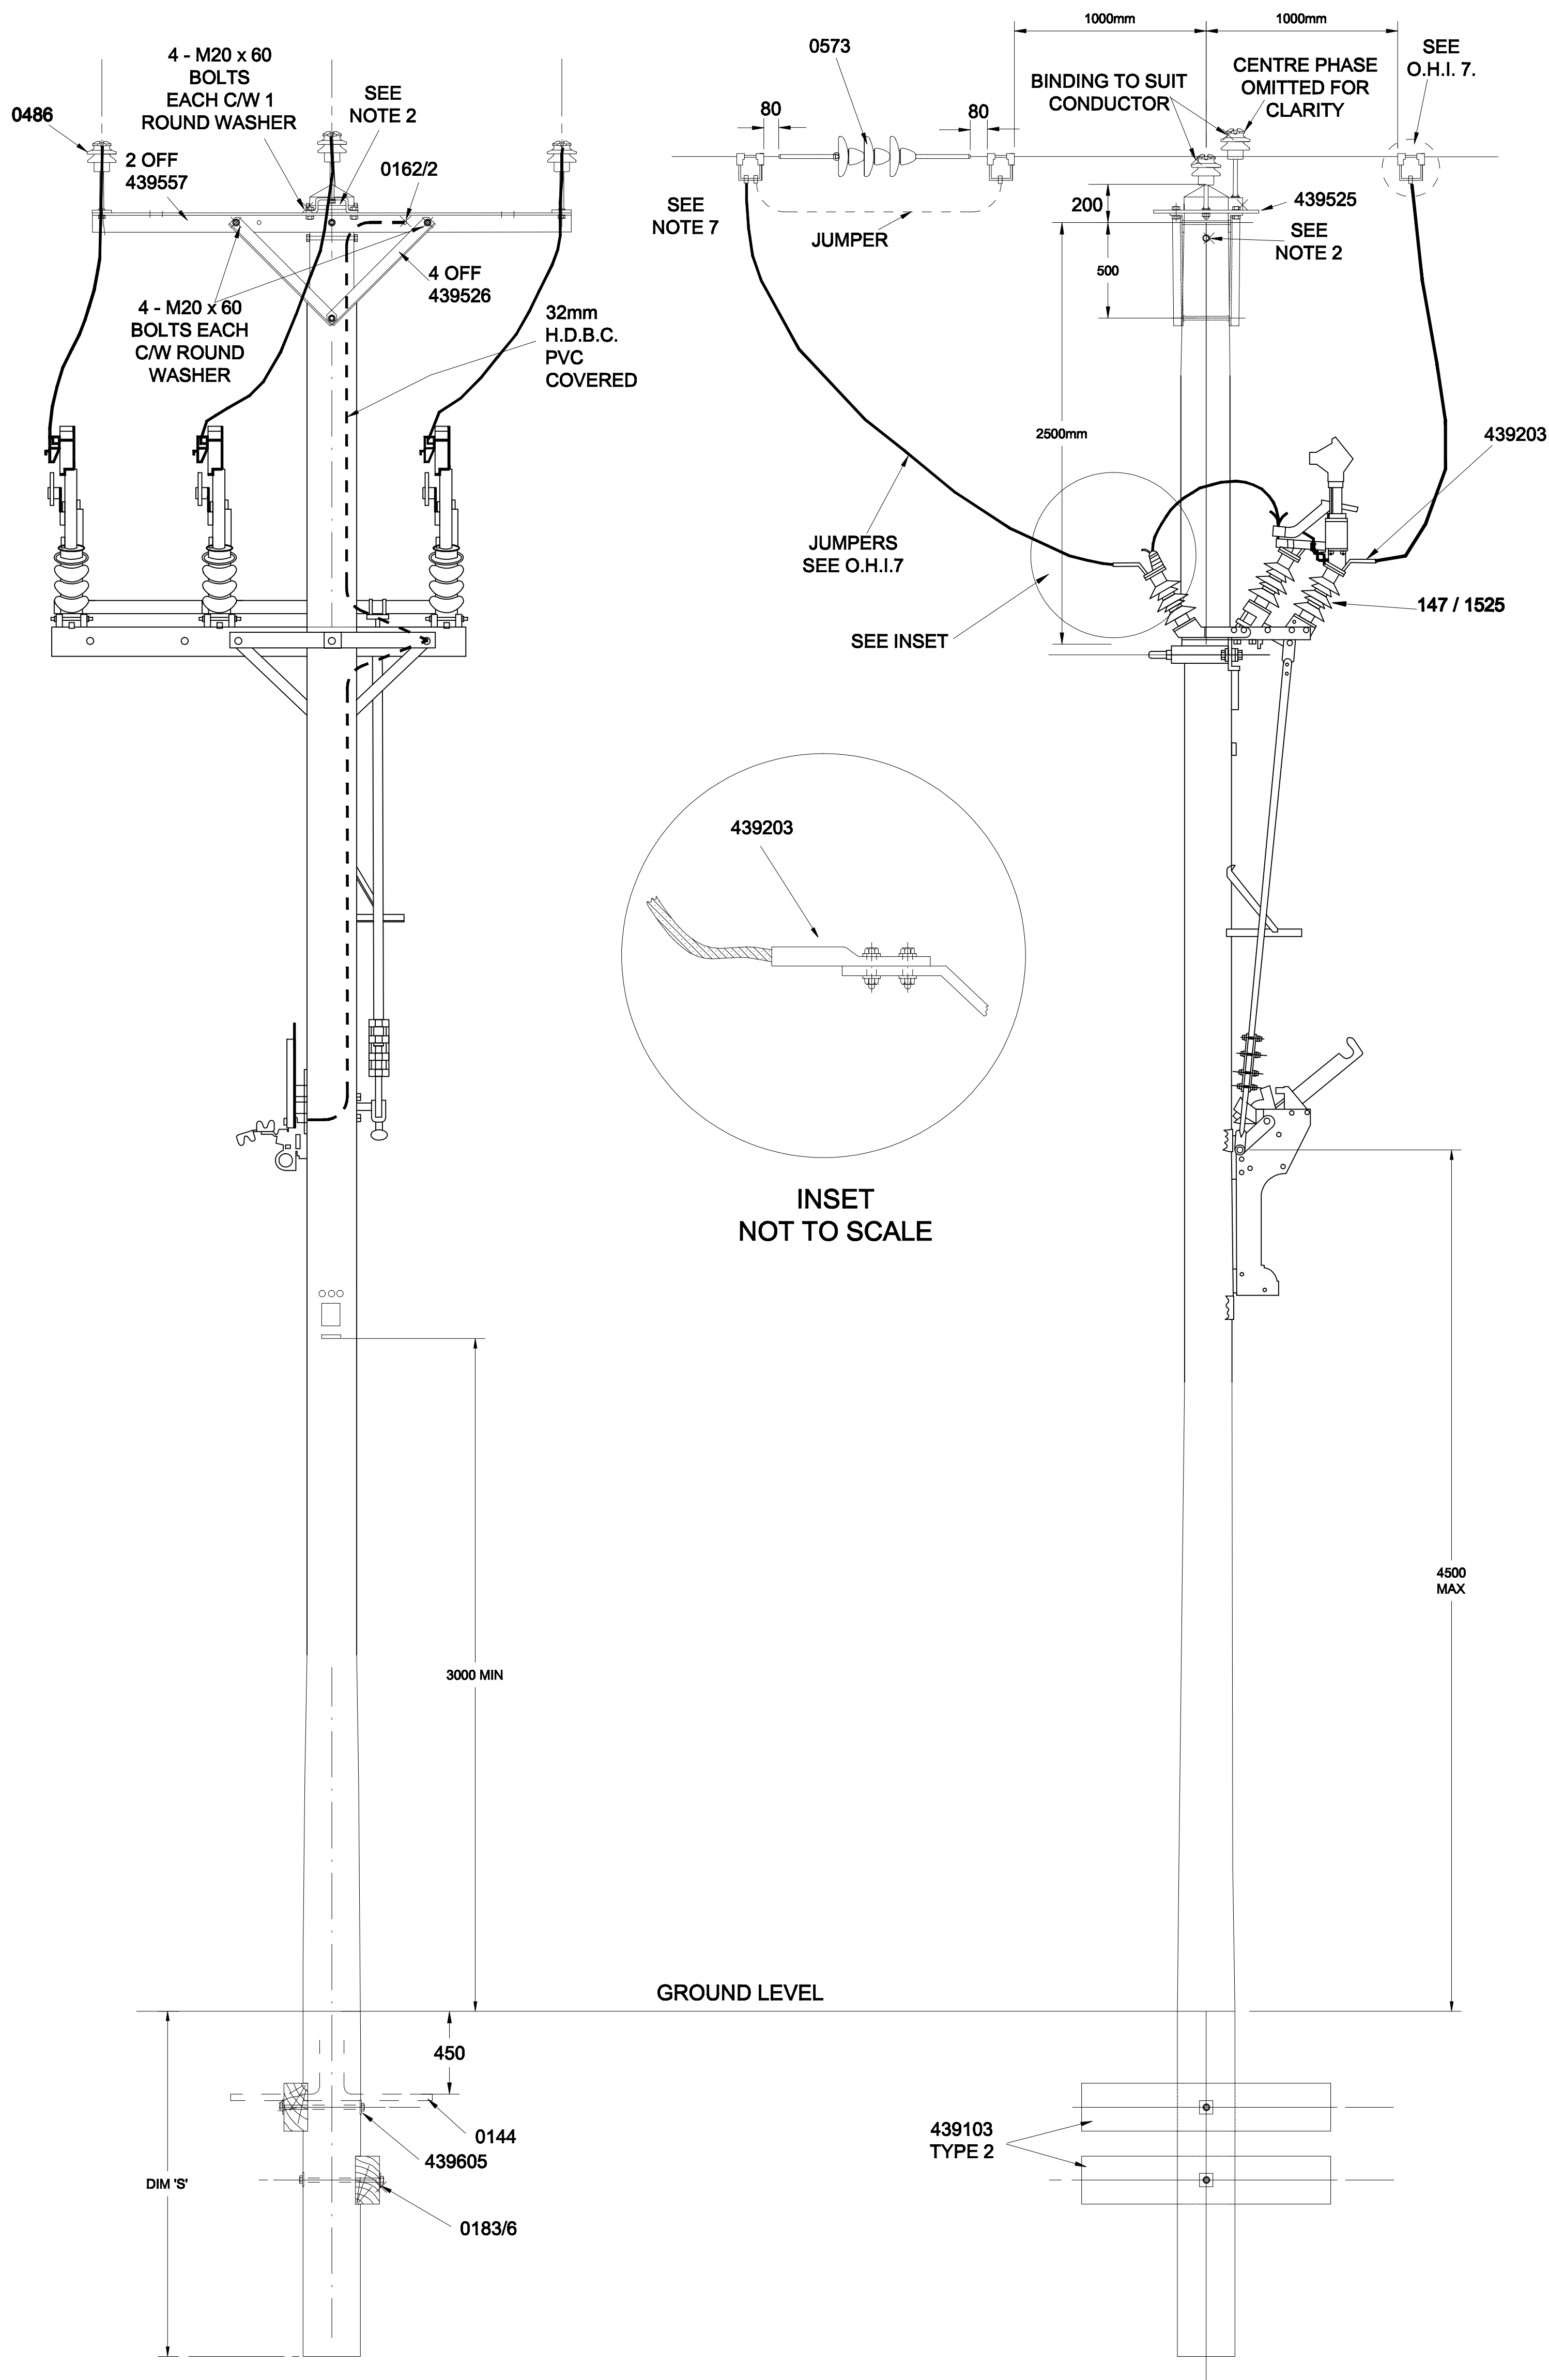

- NOTES.
1. ALL POLE BOLTS TO BE M20 DIA. EACH WITH WASHER AND NUT TO BS. 4190
 2. FIT 2 - M20 POLE BOLTS WITH 2 WASHERS 439605, AT POLE TOP
 3. TWO BAULKS TO BE FITTED IN ALL CASES
 4. DETAIL DRGS PREFIXED 43..... REFER TO E.S.I. BASED DRGS.
OTHER DETAIL DRGS. REFER TO 1.09.101. SERIES
 5. ALL STEELWORK AND POLE FIXINGS DIRECTLY ASSOCIATED WITH THE AERIAL SWITCH WILL BE SUPPLIED WITH THE SWITCH.
 6. MIN. POLE HEIGHT 10.0m - ALL NEW POLES TO BE STOUT GRADE, HOWEVER THE SWITCH MAY BE INSTAALED ON A MEDIUM GRADE POLE IF IT ALREADY EXISTS.

POLE LENGTH (m)	DIM 'S' (m)
10 . 0 - 11 . 0	1.9
12 . 0 - 14 - 0	2.1
15 . 0	2.4

ALL DIMENSIONS SHOWN ARE IN MILLIMETRES UNLESS OTHERWISE STATED

CE Electric UK		Lloyds Court, 78 Grey Street, Newcastle Upon Tyne, NE1 6AF	
Manufacturer Details		11 / 20KV OVERHEAD LINES HORIZONTAL MOUNTED ROCKING TYPE AERIAL SWITCH ON SINGLE POLE INTERMEDIATE SUPPORT	
Sheet No. 7	Scale 1:20	Type OVERHEAD	LINES
Prepared By Jonis.Webb	Grid Reference	Ref No. C319139	Historic Drg.No. 1091090906
Revised 19/01/07	Checked By G.HAMMEL	Revision D	Notes
Date Issued 09/02/01			